


WIRING DIAGRAM FOR AMPLIFIER IN BANTAM PIANO

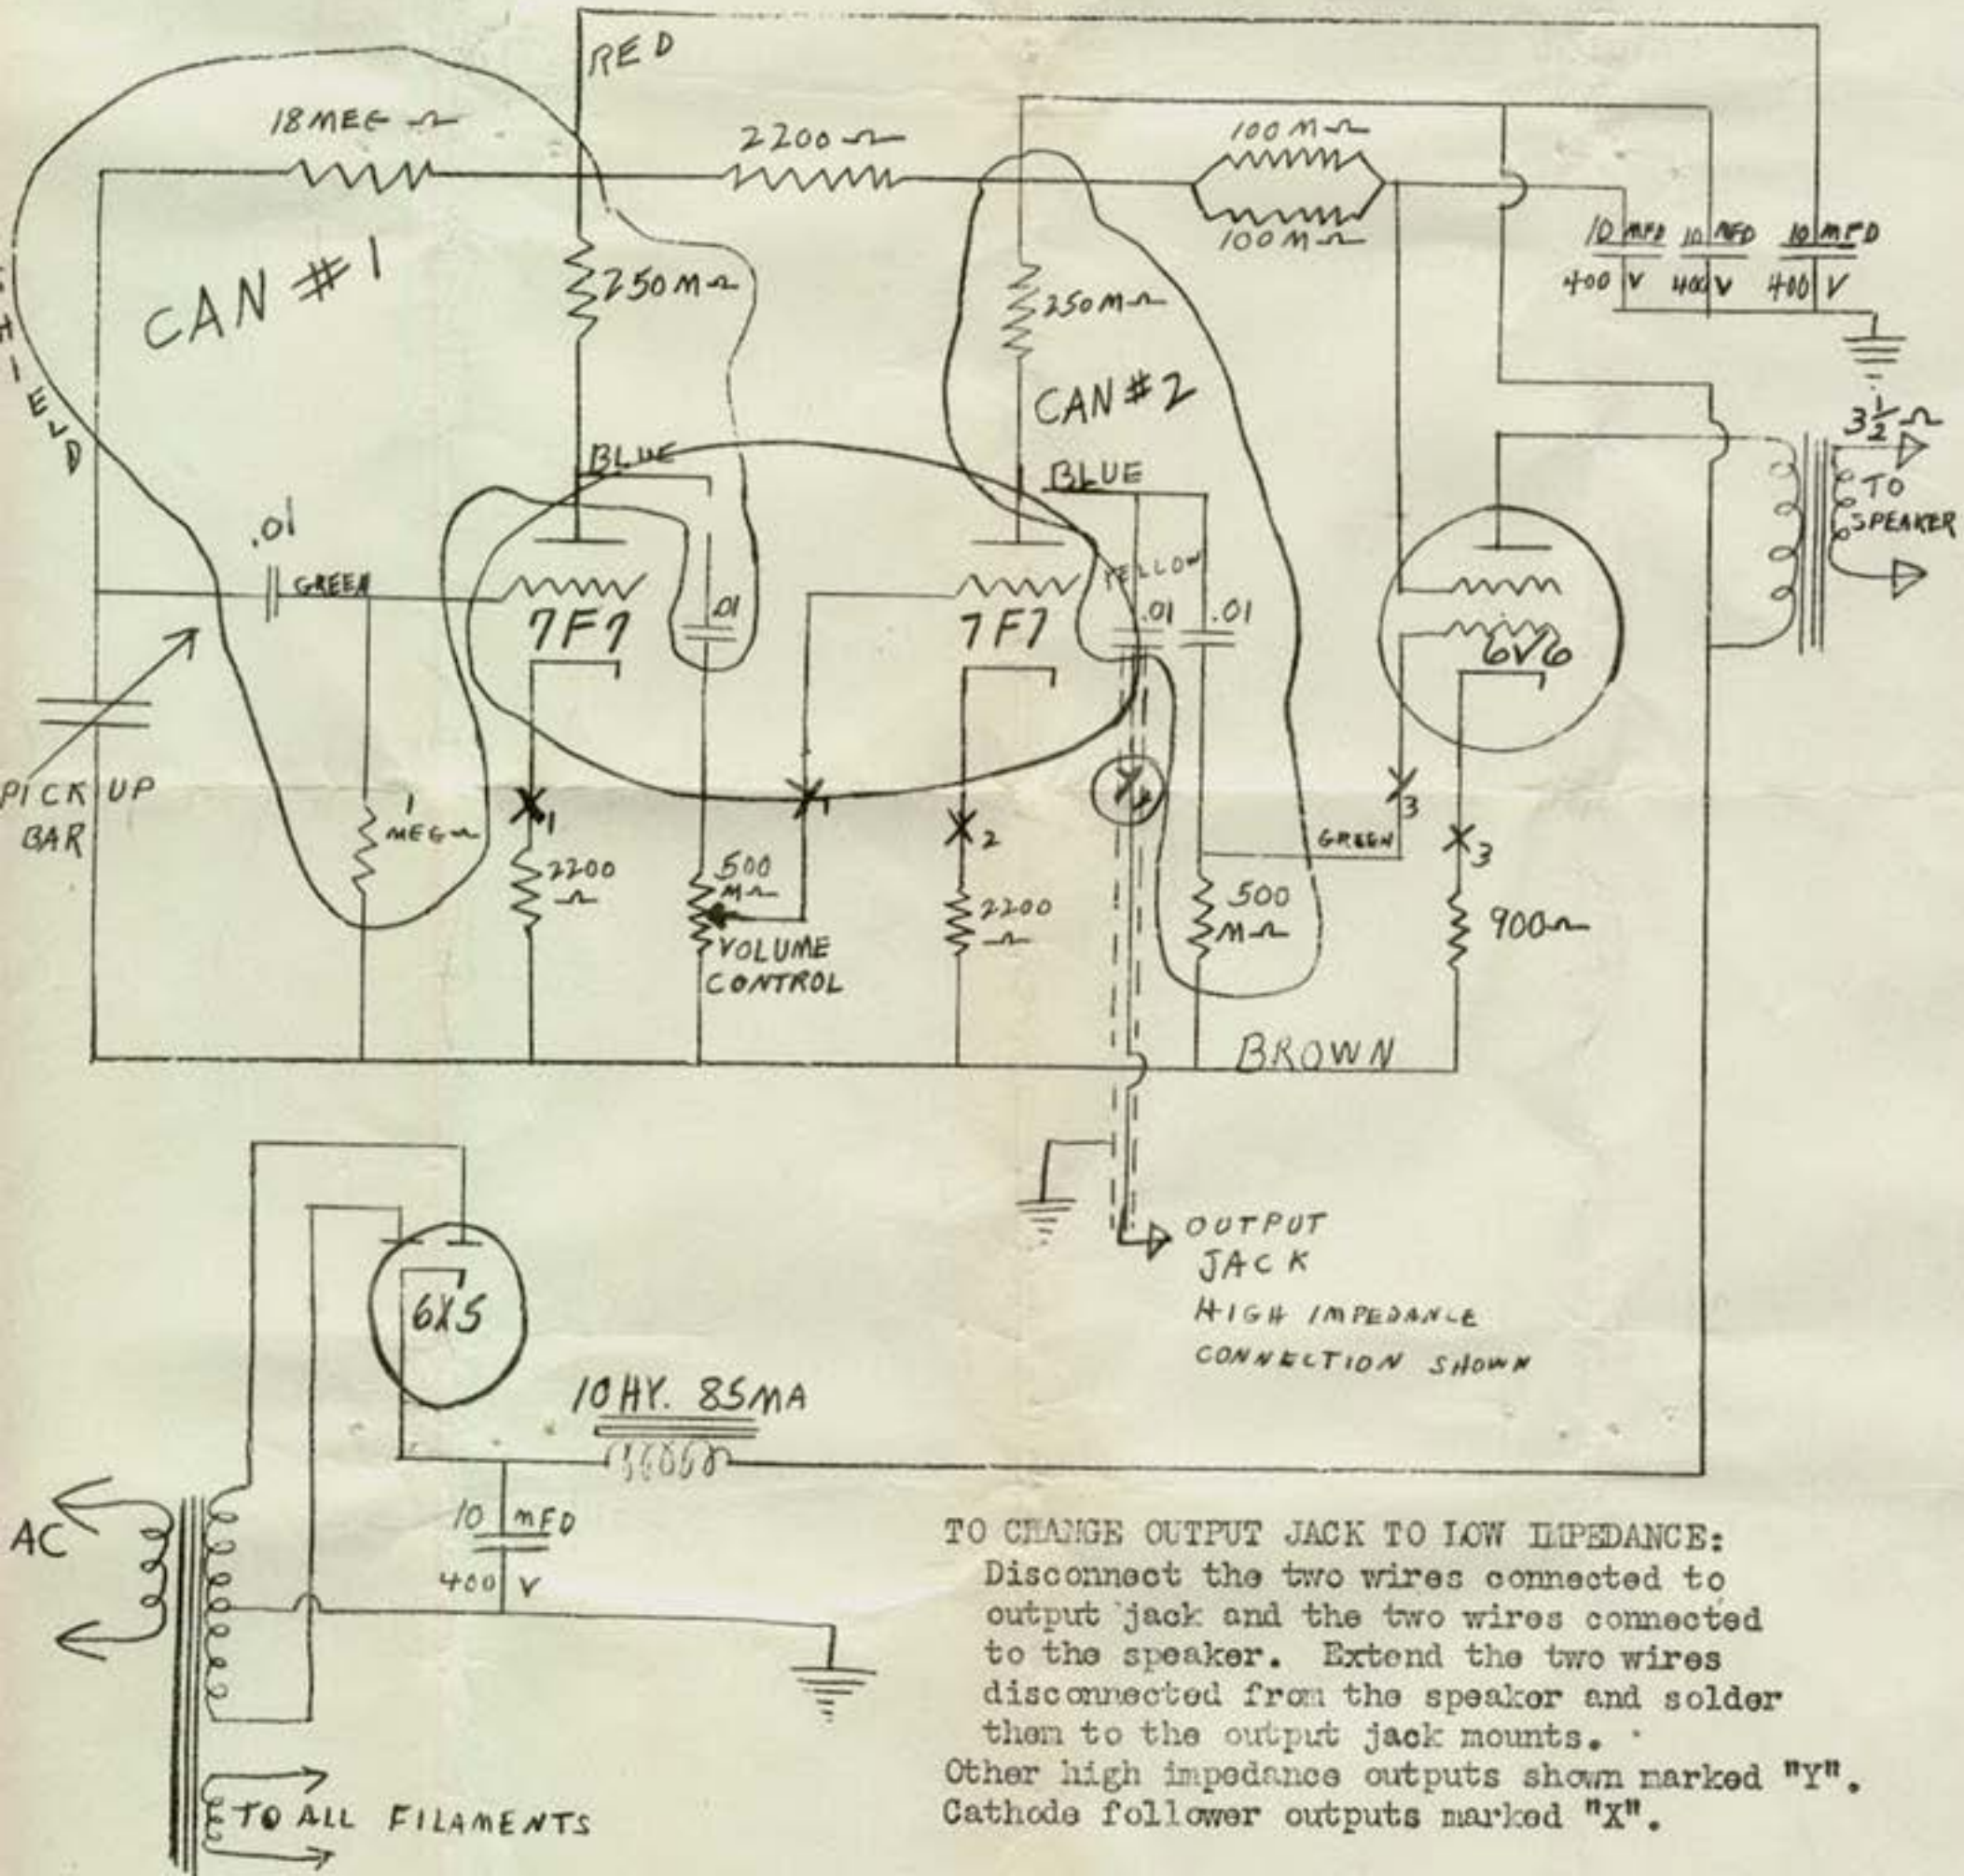

TO CHANGE OUTPUT JACK TO LOW IMPEDANCE:
 Disconnect the two wires connected to
 output jack and the two wires connected
 to the speaker. Extend the two wires
 disconnected from the speaker and solder
 them to the output jack mounts.
 Other high impedance outputs shown marked "Y".
 Cathode follower outputs marked "X".